



5 Drawer Chest


1010201
















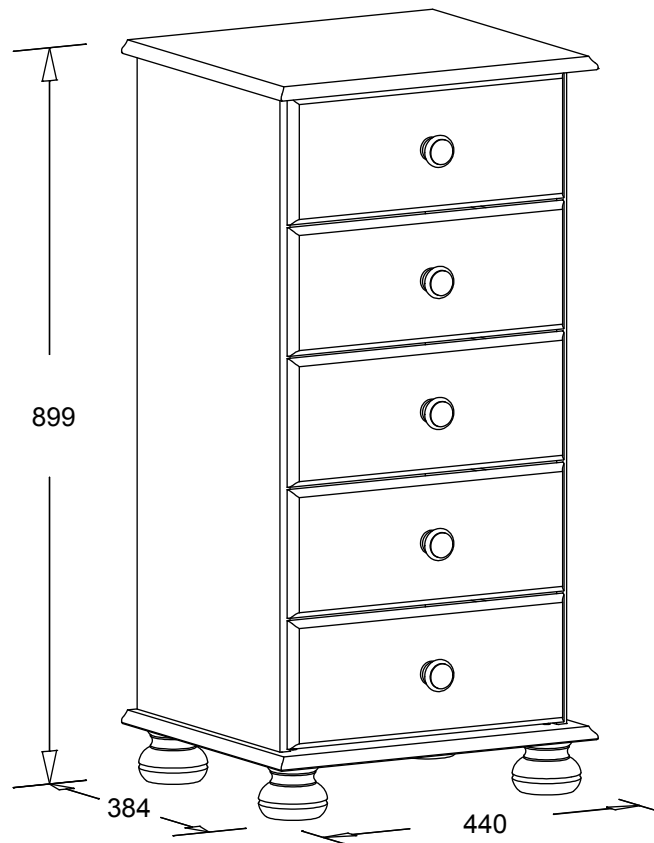


Important!


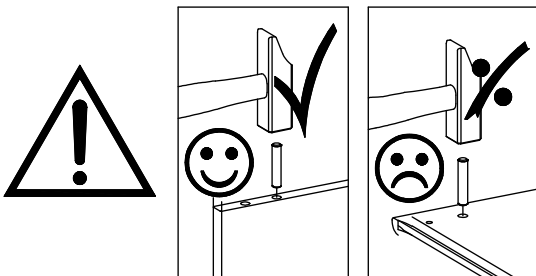


Please, read the assembly instruction carefully, before assembling.



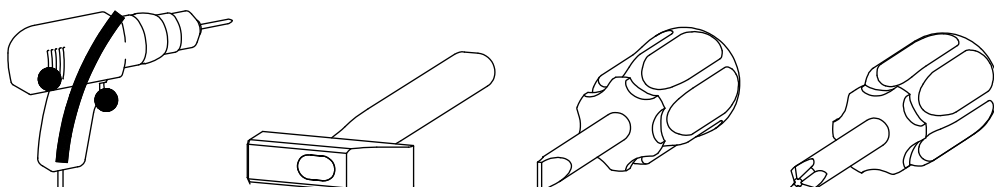


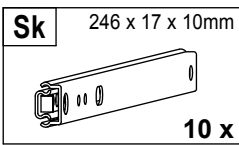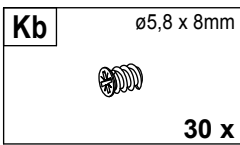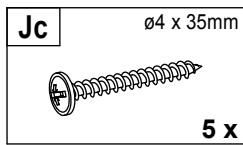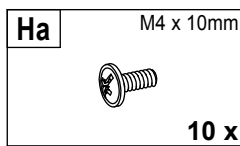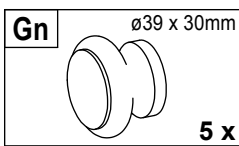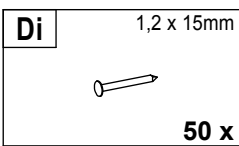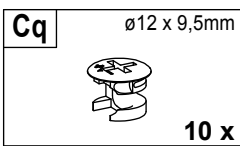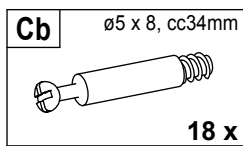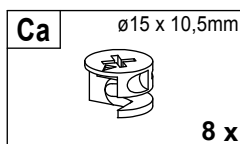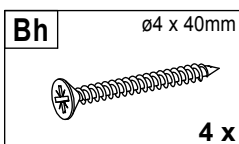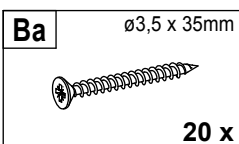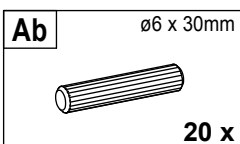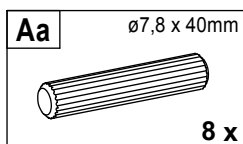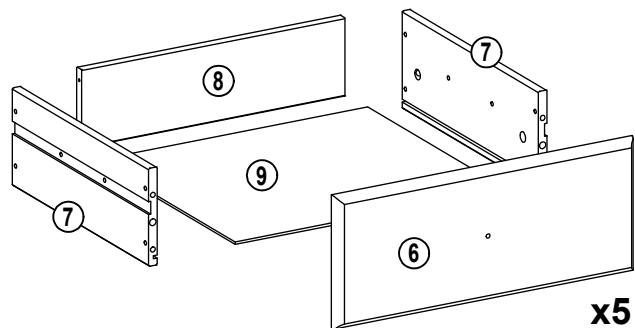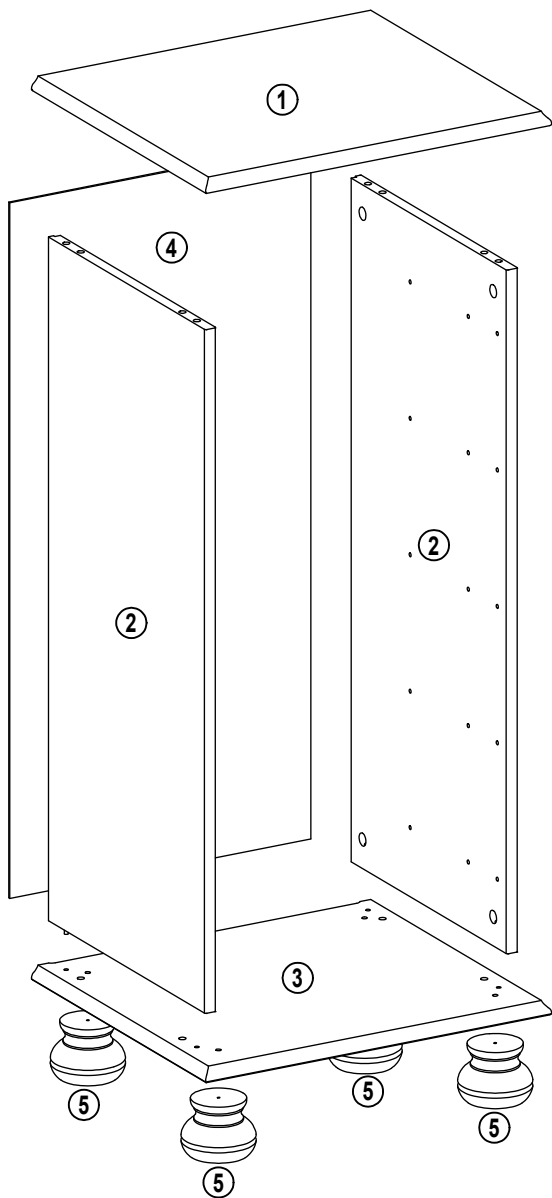






1

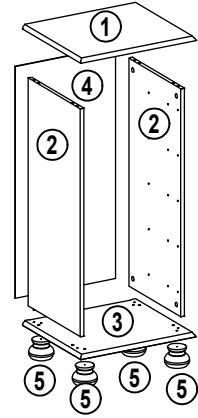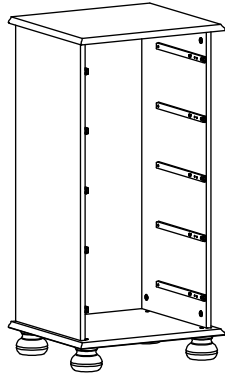





1.1

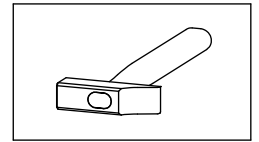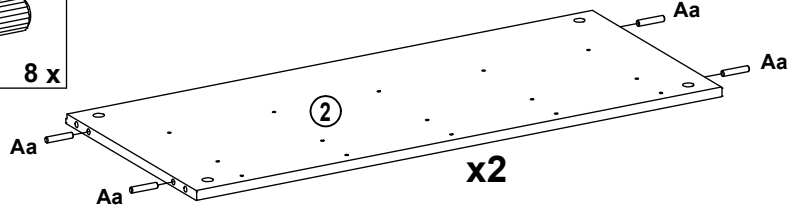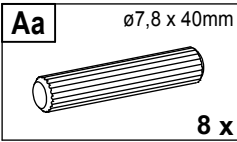




1.2

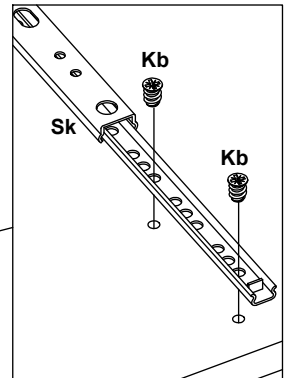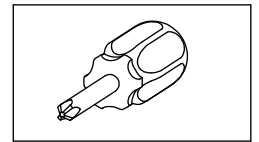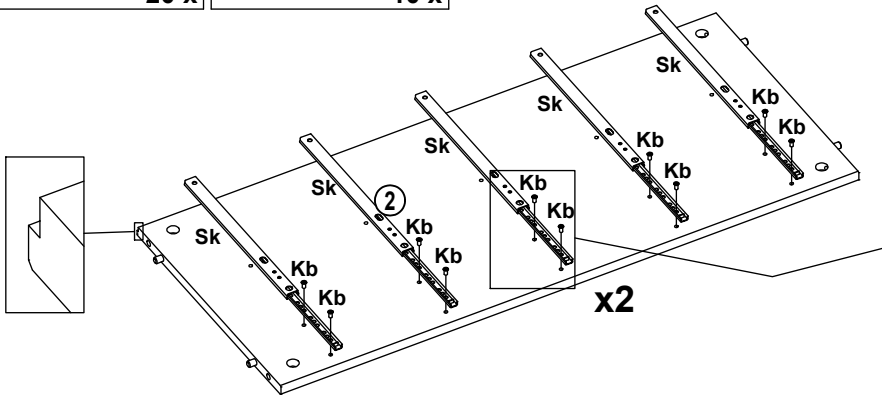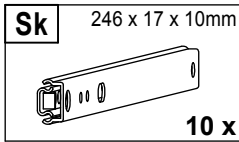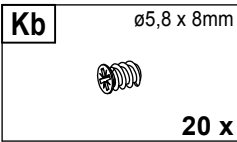

1.3


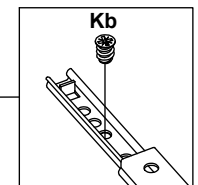
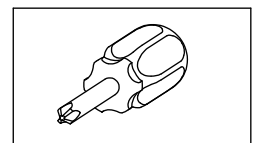
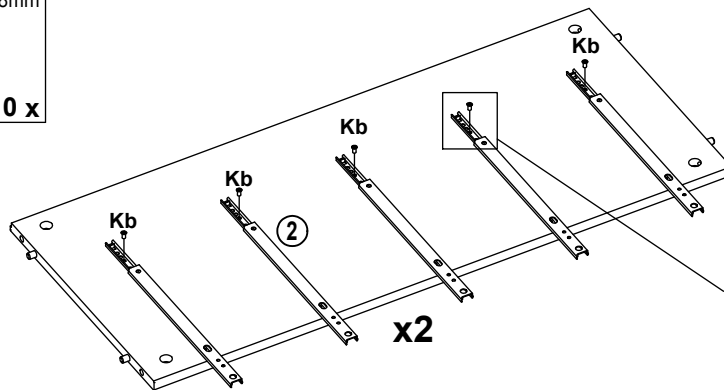
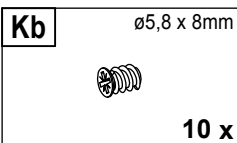


1.4

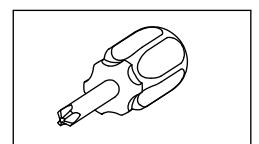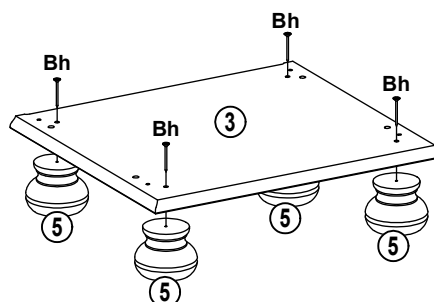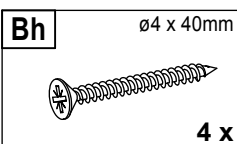






1.5

Cb $\varnothing 5 \times 8, cc34mm$
8 x

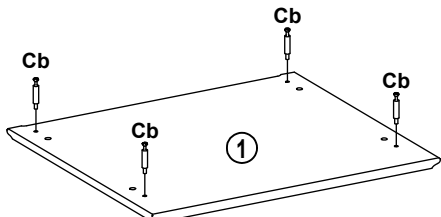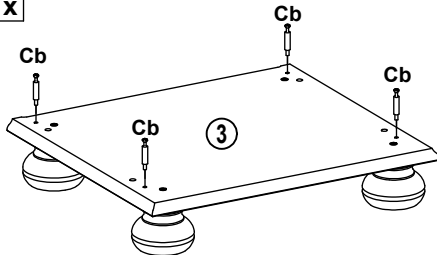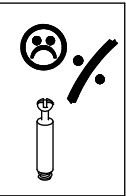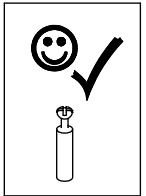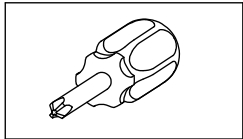





1.6

Ca $\varnothing 15 \times 10,5mm$
8 x

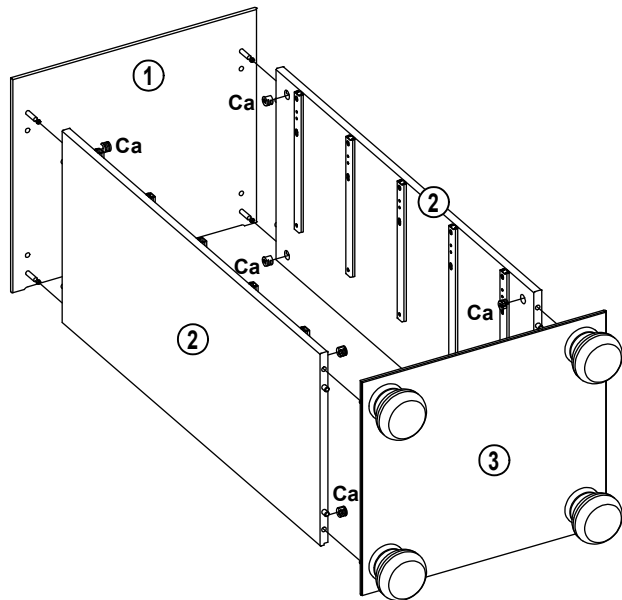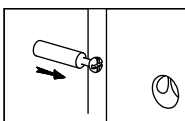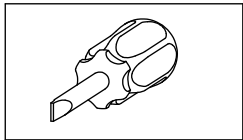


1.7



Di 1,2 x 15mm
20 x

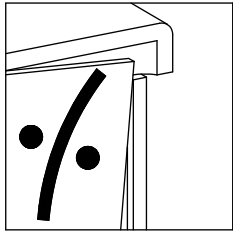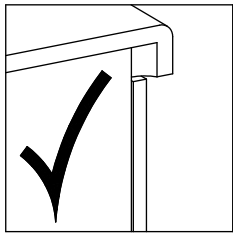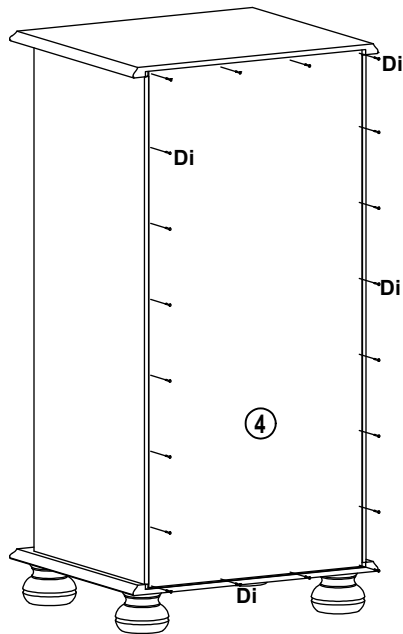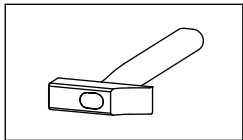




1.8

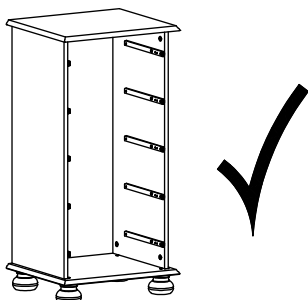




2

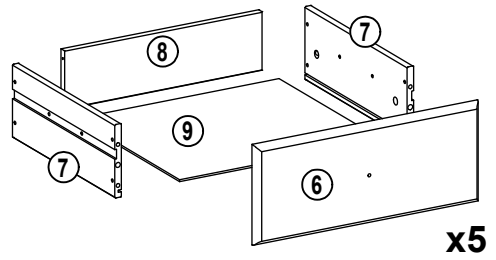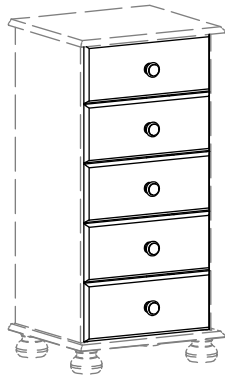




2.1

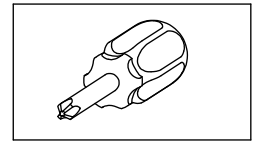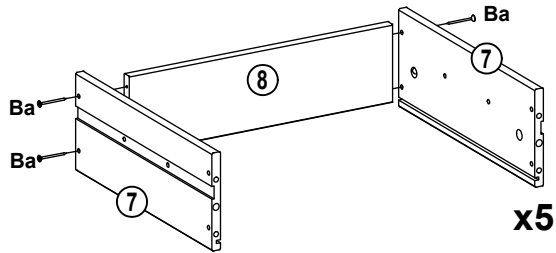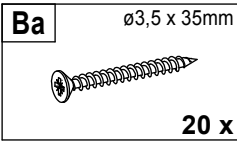




2.2

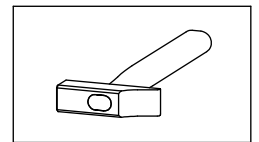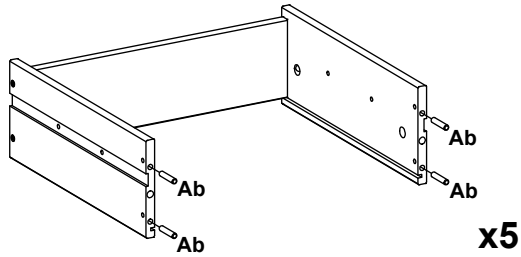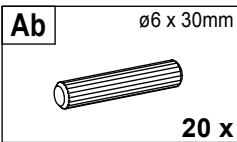


2.3

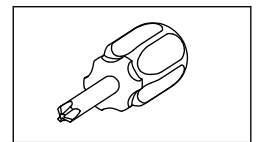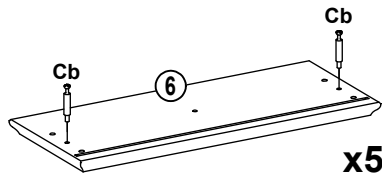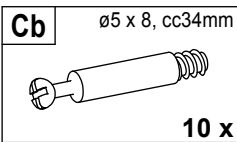




2.4

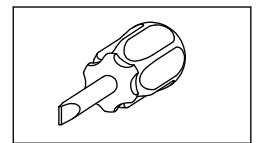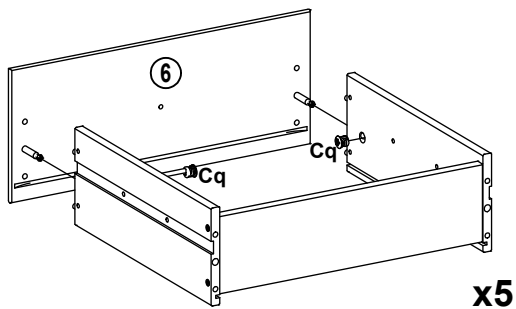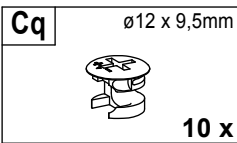





2.5

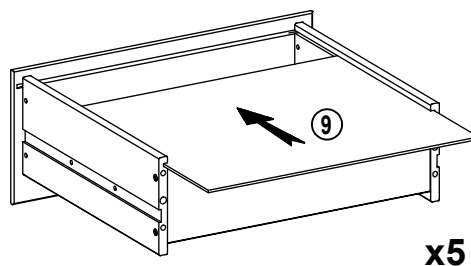





2.6

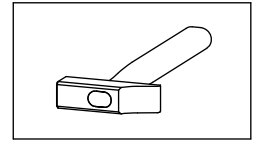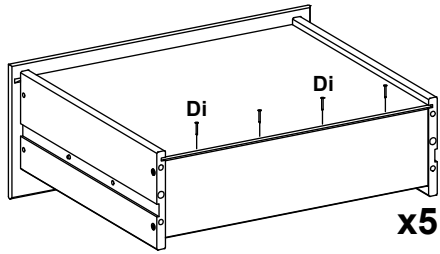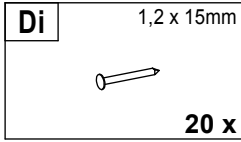

2.7

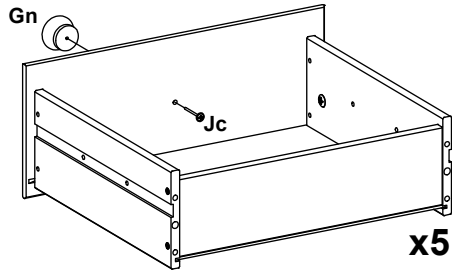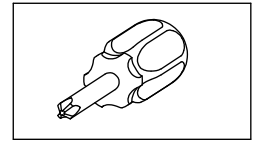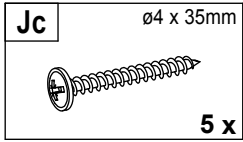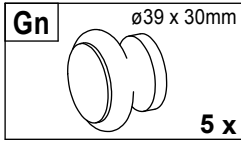

2.8

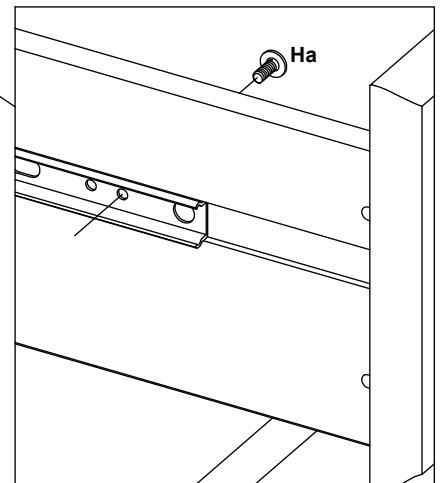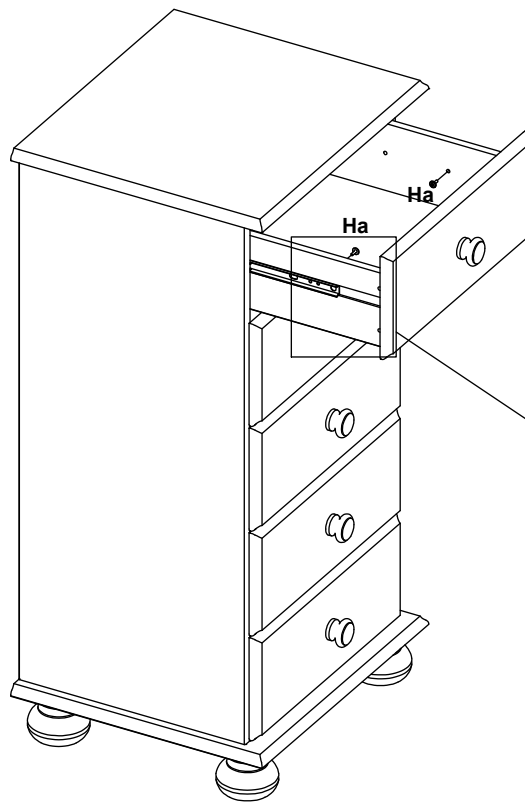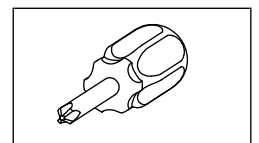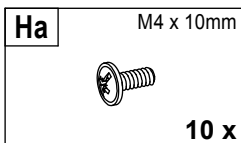

2.9

